



3.1.9 Digital Frequency Output.....	21
3.1.10 Digital Pulse Output.....	21
3.1.11 Alarm Output.....	22
3.1.12 Digital communication port and protocol.....	22
3.1.13 Electric Isolate.....	22
3.1.14 Digital Output and Calculate	22
3.2 SIMULATION SIGNAL OUTPUT AND CALCULATE	24
3.3 ALARM INFORMATION	24
3.4 TROUBLESHOOTING	25
3.4.1 No display:	25
3.4.2 Exciting alarm	25
3.4.3 Empty Pipe Alarm	25
3.4.4 Measure Flow Disallow.....	25
3.5 CONVERTER ENCASMENT AND RESERVE	26
3.5.1 Encasement	26
3.5.2 Shipping and Storage.....	26
4.ELECTROMAGNETIC FLOWMETER INSTALLATION	26
4.1 THE INSTALLATION SITE SELECTION	26
4.2 INSTALLATION REQUIREMENTS.....	27
5. WARRANTY PERIOD	1
ANNEX 1 FUNCTION OF NONLINEAR CORRECTION	1
ANNEX 2 SETTING PARAMETERS IN MENU	3
ANNEX 3 HEAT MEASUREMENT AND WIRING	8

